



U465

AMD-65

TACTICAL QUAD RAILS

MTU010

- Rugged Aircraft Aluminum Alloy Construction with Precision CNC Machining
- Designed with Innovative Top/Bottom Cover Mating Feature and Precision Tolerance for Best Fit with Hungarian AK and Variants
- Four Mil-spec Picatinny Rails with Integrated QD Swivel Housings on Left/Right Rails for Versatile Accessory Applications
- Includes 15 Top Slots, 14 Left/Right Slots and Bottom Slots
- Simple and Friendly Installation, No Gunsmith or Tool Required
- Special Height and Length Dimensions for Optimal Fitting
- Ultimate Tactical Solution to Enhance Accuracy Under Toughest Environment
- Hardcoat Anodized Finish for Wear Resistance




MTU010

U465

AMD-65

TACTICAL QUAD RAILS

Made in USA

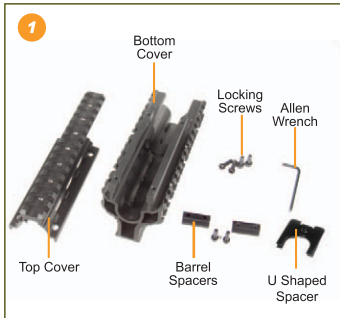

1. Separate the pre-assembled mount and arrange all parts on a flat surface.



2. Remove the Cleaning Rod by bending and pulling its front end out from the notch under the Front Sight.


Caution: Make sure firearm is not loaded.
Remove magazine and examine chamber.
Use safe handling procedures at all times.

AMD-65 TACTICAL QUAD RAILS INSTALLATION GUIDE

MTU010

Shown with UTG Scope and Accessories



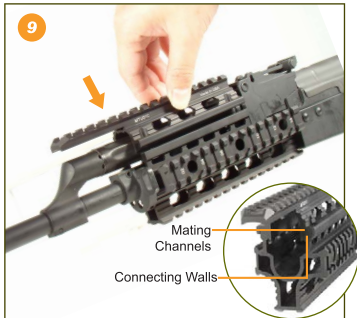


9. Fit the Top Cover onto the gas tube. Make sure the 2 Connecting Walls of the Bottom Cover fit into the two Mating Channels of the Top Cover.

5



10. Evenly tighten all 4 screws to securely lock the top and bottom covers with the included Allen Wrench.

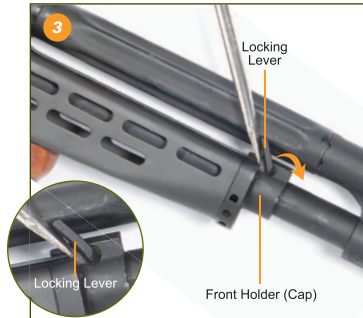


3. Flip forward the Locking Lever on the Front Holder (Cap) of the Handguard with a screwdriver.


2



4. Move the Front Holder (Cap) forward and remove the original handguard/foregrip assembly.

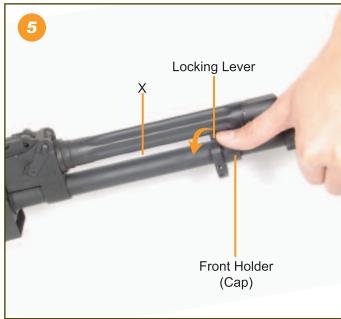


4. Move the Front Holder (Cap) to the original position and turn the Locking Lever backward to lock the Front Holder (Cap) on the barrel.

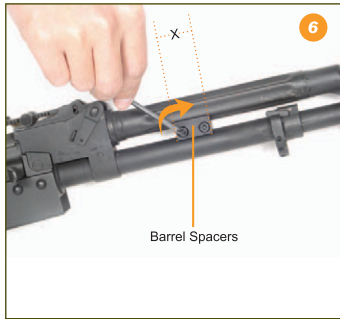

6. Place the 2 Barrel Spacers between the barrel and the gas tube at position X shown in 5. Tighten the 2 screws to lock the spacers firmly. The Barrel Spacers will prevent over tightening of the top/bottom covers and to allow for normal operation of the piston.



7. Fit as many U Shaped Spacers as needed at the front of the receiver before rails are installed. The spacers should be inserted into the U shaped opening to ensure a tight fit against the barrel.

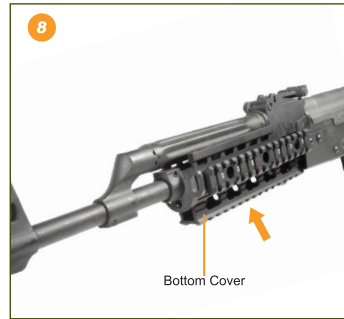

8. Fit the Bottom Cover onto the barrel and make sure the fit is even and level.